

Pump P212



Created on: **29.06.2023**

Document no.: **951-171-084-EN**

Version: **01**



Read these instructions before installation or start-up of the product and keep them readily available for later consultation!

Original EC Declaration of Incorporation in accordance with Directive 2006/42/EC, Appendix II Part 1 B

The manufacturer hereby declares at its sole responsibility that the partly completed machinery conforms to the essential health and safety requirements of the Machinery Directive 2006/42/EC, Annex I, marked in the Annex to the EC Declaration of Incorporation as applicable and fulfilled at the time of placing on the market.

The special technical documents were prepared following Annex VII part B. Upon justifiable request, these special technical documents can be forwarded electronically to the respective national authorities. The authorized company for the compilation of the technical documentation is the manufacturer.

Designation: Multi-line pump for feeding lubricant within a centralized lubrication system

Type: Pump P212

Item number: 660-XXXXX-X / 6600-XXXXXXX

Furthermore, the following directives and standards were applied in the respective applicable areas:

2006/42/EC: Machinery Directive

2011/65/EU: RoHS II

2014/30/EU: Electromagnetic Compatibility

EN ISO 12100:2010

EN 809+A1/AC:2010

EN 60204-1:2018

EN IEC 63000:2018

EN 60947-5-1:2017

EN IEC 60947-5-2:2020

The partly completed machinery must not be put into service until it has been established that the machinery into which it is to be incorporated is in compliance with the provisions of the Machinery Directive 2006/42/EC and all other applicable Directives.

Walldorf, 29.06.2023

Jürgen Kreutzkämper

Manager, R&D

Germany

Stefan Schürmann

Manager, PD

Germany South

Manufacturer: SKF Lubrication Systems Germany GmbH, Heinrich-Hertz-Str. 2-8, 69190 Walldorf, Germany

Original UK Declaration of incorporation according to the Supply of Machinery (Safety) Regulations 2008 No. 1597 Annex II

The manufacturer hereby declares under sole responsibility that the partly completed machinery complies with the essential health and safety requirements of UK legislation Supply of Machinery (Safety) Regulations 2008 No. 1597 Annex I, marked in the Annex to the EC Declaration of Incorporation as applicable and fulfilled at the time of placing on the market.

The special technical documents were prepared following Annex VII part B. Upon justifiable request, these special technical documents can be forwarded electronically to the respective national authorities. The authorized company for the compilation of the technical documentation is SKF (U.K.) Limited, 2 Canada Close, Banbury, Oxfordshire, OX16 2RT, GBR.

Designation: Multi-line pump for feeding lubricant within a centralized lubrication system

Type: Pump P212

Item number: 660-XXXXX-X / 6600-XXXXXXX

Furthermore, the following regulations and standards were applied in the respective applicable areas:

Supply of Machinery (Safety) Regulations 2008 No. 1597

Electromagnetic Compatibility Ordinance 2016 No. 1091

The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012 No. 3032

EN ISO 12100:2010

EN 809+A1/AC:2010

EN 60204-1:2018

EN IEC 63000:2018

EN 60947-5-1:2017

EN IEC 60947-5-2:2020

The partly completed machinery must not be put into service until it has been established that the machinery into which it is to be incorporated is in compliance with the provisions of UK legislation Supply of Machinery (Safety) Regulations 2008 No. 1597 and all other applicable Directives.

Walldorf, 29.06.2023

Jürgen Kreutzkämper

Manager, R&D

Germany

Stefan Schürmann

Manager, PD

Germany South

Manufacturer: SKF Lubrication Systems Germany GmbH, Heinrich-Hertz-Str. 2-8, 69190 Walldorf, Germany

Appendix to Declaration of Incorporation in accordance with 2006/42/EC, Annex II, No. 1 B

Description of the essential health and safety requirements according to 2006/42/EC, Annex I, which have been applied and fulfilled:

Table 1			
Appendix to Declaration of Incorporation			
Piston pumps with reservoir, with/without external motor, without control unit			
Types: P205, P208, P212, P215, P230, ZPUxx, JM, FF, FB, FK, RA, TA, TB			
No.:	Essential health and safety requirement	Applicable:	Fulfilled:
1.1	Principles		
1.1.2	Principles of safety integration	Yes	Yes
1.1.3	Materials and products	Yes	Not completely fulfilled ¹⁾
1.1.5	Design of machinery to facilitate its handling	Yes	Yes
1.1.6	Ergonomics	Yes	Not completely fulfilled ²⁾
1.2	Control systems		
1.2.1	Safety and reliability of control systems	Yes	Yes
1.2.3	Starting	Yes	Yes
1.2.6	Failure of the power supply	Yes	Yes
1.3	Protection against mechanical hazards		
1.3.1	Risk of loss of stability	Yes	Yes
1.3.2	Risk of break-up during operation	Yes	Not completely fulfilled ³⁾
1.3.4	Risks due to surfaces, edges or angles	Yes	Yes
1.3.7	Risks related to moving parts	Yes	Yes
1.3.9	Risks of uncontrolled movements	Yes	Yes
1.5	Risks due to other hazards		
1.5.1	Electricity supply	Yes	Yes
1.5.6	Fire	Yes	Yes
1.5.8	Noise	Yes	Yes
1.5.13	Emissions of hazardous materials and substances	Yes	Yes
1.5.15	Risk of slipping, tripping, or falling	Yes	Not completely fulfilled ⁴⁾
1.6	Servicing		
1.6.1	Machinery maintenance	Yes	Yes
1.6.2	Access to operating positions and servicing points	Yes	Not completely fulfilled ⁵⁾
1.6.4	Operator interventions	Yes	Yes
1.7	Information		
1.7.1	Information and warnings on the machinery	Yes	Yes
1.7.1.1	Information and information devices	Yes	Yes
1.7.2	Warning of residual risks	Yes	Yes
1.7.3	Marking of machinery	Yes	Yes
1.7.4	Operating instructions/assembly instructions	Yes	Yes
1.7.4.1	General principles for the drafting of operating instructions/assembly instructions	Yes	Yes
1.7.4.2	Contents of the operating instructions/assembly instructions	Yes	Yes
1.7.4.3	Sales literature	Yes	Yes

¹⁾ The product is designed for operation with non-hazardous media. The owner-operator must check whether the lubricant used has certain hazardous effects (such as sensitization). The installation of a drip pan could be required. Pressure-relief valves must also be used.

²⁾ The operator must ensure that the pump is integrated into the higher-level machine in such a way that the pump can be operated and filled ergonomically.

³⁾ The operator must protect the lubrication system against excessive pressure. This should be done by fitting every pump element with a pressure limiting valve with suitable opening pressure (see the "Technical data" for the pump in question).

⁴⁾ Not relevant inside the incomplete machine (pump), only outside the partially completed machine. The machine's owner or operator is responsible here.

⁵⁾ The owner-operator must ensure that the pump is integrated into the main machine in such a way that it can be operated without danger.

Masthead

Manufacturer

SKF Lubrication Systems Germany GmbH
Email: Lubrication-germany@skf.com
www.skf.com/lubrication

Berlin Plant
Motzener Strasse 35/37
12277 Berlin
Germany
Tel. +49 (0)30 72002-0
Fax +49 (0)30 72002-111

Walldorf Plant
Heinrich-Hertz-Strasse 2-8
69190 Walldorf, Germany
Germany
Tel.: +49 (0) 6227 33-0
Fax: +49 (0) 6227 33-259

Authorized local distributors

- Great Britain -
SKF (U.K.) Limited,
2 Canada Close, Banbury, Oxfordshire,
OX16 2RT, GBR.

- North America -
SKF Lubrication Business Unit
Lincoln Industrial
5148 North Hanley Road, St. Louis,
MO. 63134 USA

- South America -
SKF Argentina Pte. Roca 4145,
CP 2001 Rosario, Santa Fe

Warranty

The instructions contain no statements regarding the warranty or liability for defects. That information can be found in our General Terms of Payment and Delivery.

Training

We conduct detailed training in order to enable maximum safety and efficiency. We recommend taking advantage of this training. For further information, contact your authorized SKF dealer or the manufacturer.

Table of contents

Masthead	4
Table of contents.....	5
Safety alerts, visual presentation, and layout.....	6
1. Safety instructions.....	7
1.1 General safety instructions.....	7
1.2 General electrical safety instructions.....	7
1.3 General behaviour when handling the product	7
1.4 Intended use.....	7
1.5 Persons authorized to use the product.....	7
1.6 Foreseeable misuse	8
1.7 Referenced documents	8
1.8 Prohibition of certain activities	8
1.9 Painting plastic components and seals	8
1.10 Safety markings on the product	8
1.11 Note on the type plate	8
1.12 Notes on CE marking	9
1.13 Note on Low Voltage Directive.....	9
1.14 Note on Pressure Equipment Directive.....	9
1.15 Note on UKCA marking.....	9
1.16 Note on EAC marking.....	9
1.17 Note on China RoHS mark.....	9
1.18 Emergency shutdown	9
1.19 Assembly, maintenance, fault, repair.....	9
1.20 First start-up, daily start-up.....	9
1.21 Residual risks.....	10
2. Lubricants	11
2.1 General information.....	11
2.2 Material compatibility	11
2.3 Temperature properties.....	11
2.4 Aging of lubricants	11
2.5 Avoidance of faults and hazards.....	11
2.6 Solid lubricants	11
3. Overview, functional description.....	12
3.1 Overview	12
3.2 Mode of operation	12
4. Technical data	13
4.1 Technical data.....	13
4.2 Delivery rate.....	14
4.3 Motor.....	15
4.4 Ultrasonic sensor.....	16
4.4.1 Full signal/low-level signal/minimum clearance..	16
4.4.2 Ultrasonic sensor 664-85313-9.....	17
4.5 Type identification code for pump P212	19
5. Delivery, returns, storage	20
5.1 Delivery	20
5.2 Return shipment.....	20
5.3 Storage.....	20
5.4 Storage temperature range	20
5.5 Storage conditions for products filled with lubricant.....	20
5.5.1 Storage period up to 6 months.....	20
5.5.2 Storage period between 6 and 18 months.....	20
5.5.3 Storage period more than 18 months.....	20
5.6 Declaration of decontamination	20
6. Assembly	21

6.1 Electrical connection.....	21
6.2 Important note regarding installation of the pump elements.....	21
6.3 Installing the pump elements.....	22
6.4 Setting the pump elements.....	23
6.5 Filling the reservoir	24
6.5.1 Filling via the reservoir cover.....	24
6.5.2 Filling via the fill connection	24
6.6 Accidental filling with wrong lubricant.....	24
7. First start-up	25
7.1 Inspections before first start-up.....	25
7.2 Inspections during first start-up.....	25
7.3 Activating the pump.....	25
8. Operation.....	26
8.1 Daily start-up	26
8.1.1 Inspections.....	26
8.1.2 Filling the reservoir during operation.....	26
8.1.3 Cleaning	26
9. Maintenance	27
10. Cleaning	28
10.1 Basics	28
10.2 Interior cleaning	28
10.3 Exterior cleaning	28
11. Faults, causes, and remedies.....	29
12. Shutdown, disposal.....	30
12.1 Temporary shutdown.....	30
12.2 Permanent shutdown, disassembly	30
12.3 Disposal.....	30
13. Spare parts.....	31
13.1 Ultrasonic sensor	31
13.2 Pump element KR7	31
13.3 Pump element KR12.....	32
13.4 Motor.....	32
13.5 Retainer plate, reservoir, stirring paddle.....	32
13.6 Plug screw.....	32
14. Appendix	33
14.1 Cable colors in accordance with IEC 60757	33
14.2 China RoHS Table.....	33

Safety alerts, visual presentation, and layout

While reading these instructions, you will encounter various symbols, illustrations, and text layouts intended to help you navigate and understand the instructions. Their meaning is explained below.

Safety alerts:

Activities that present specific hazards (to life and limb or possible damage to property) are indicated by safety alerts. Always be sure to follow the instructions given in the safety alerts.

DANGER

These safety alerts indicate an imminent danger. Ignoring them will result in death or serious injury

WARNING

These safety alerts indicate potentially imminent danger. Ignoring them could result in death or serious injury

CAUTION

These safety alerts indicate potentially imminent danger. Ignoring them could result in minor injury

NOTICE

These safety alerts indicate a potentially harmful situation. Ignoring them could result in damage to property or malfunctions

Illustrations:

The illustrations used depict a specific product. For other products, they may have the function of a diagram only. This does not alter the basic workings and operation of the product.

Text layout:

- **First-order bulleted lists:** Items on a bulleted list start with a solid black dot and an indent.
 - **Second-order bulleted lists:** If there is a further listing of subitems, the second-order bulleted list is used.
- 1 **Legend:** A legend explains the numbered contents of an illustration, presented as a numbered list. Items in a legend start with a number (with no dot) and an indent.
 - **Second-order legend:** In some cases, the numbered contents of an image represent more than just one object. A second-order legend is then used.

1. Instruction steps: These indicate a chronological sequence of instruction steps. The numbers of the steps are in bold and are followed by a period. If a new activity follows, the numbering starts again at “1.”

- **Second-order instruction steps:** In some cases, it is necessary to divide up a step into a few substeps. A sequence of second-order instruction steps is then used.

1. Safety instructions

1.1 General safety instructions

- Putting the products into operation or operating them without having read the instructions is prohibited. The operator must ensure that the instructions are read and understood by all persons tasked with working on the product or who supervise or instruct such persons. Retain the instructions for further use.
- The product may only be used in awareness of the potential dangers, in proper technical condition, and according to the information in this manual.
- Any faults that could affect safety must be remedied according to responsibility. The supervisor must be notified immediately in case of malfunctions outside one's individual scope of responsibility.
- Unauthorized modifications and changes can have an unpredictable effect on safety and operation. Unauthorized modifications and changes are therefore prohibited. Only original SKF spare parts and SKF accessories may be used.
- Any unclear points regarding proper condition or correct assembly/operation must be clarified. Operation is prohibited until issues have been clarified.
- The components used must be suitable for the intended use and the applicable operating conditions, e.g. max. operating pressure and ambient temperature range, and must not be subjected to torsion, shear, or bending.

1.2 General electrical safety instructions

- Electrical devices must be kept in proper condition. This must be ensured by periodic inspections in accordance with the relevant applicable standards and technical rules. The type, frequency, and scope of the inspections must be determined in accordance with the risk assessment to be carried out by the operator. Work on electrical components may be performed only by qualified electricians. Connect the electrical power only in accordance with the valid terminal diagram and in observance of the relevant regulations and the local electrical supply conditions.
- Work on electrical components may be performed only in a voltage-free state and using tools suitable for electrical work. Do not touch cables or electrical components with wet or moist hands.
- Fuses must not be bridged. Always replace defective fuses with fuses of the same type.
- Ensure proper connection of the protective conductor for products with protection class I. Observe the specified enclosure rating.
- The operator must implement appropriate measures to protect vulnerable electrical devices from the effects of lightning during use. The electrical device is not furnished with a grounding system for the dissipation of the respective electric charge and does not have the voltage strength necessary to withstand the effects of lightning.

1.3 General behaviour when handling the product

- Familiarize yourself with the functions and operation of the product. The specified assembly and operating steps and their sequences must be observed.
- Keep unauthorized persons away.
- Wear personal protective equipment always.
- Precautionary operational measures and instructions for the respective work must be observed.
- In addition to these Instructions, general statutory regulations for accident prevention and environmental protection must be observed.
- Precautionary operational measures and instructions for the respective work must be observed. Uncertainty seriously endangers safety.
- Safety-related protective and safety equipment must not be removed, modified or affected otherwise in its function and is to be checked at regular intervals for completeness and function.
- If protective and safety equipment has to be dismantled, it must be reassembled immediately after finishing the work, and then checked for correct function.
- Remedy occurring faults in the frame of responsibilities. Immediately inform your superior in the case of faults beyond your competence.
- Never use parts of the centralized lubrication system or of the machine as standing or climbing aids.

1.4 Intended use

Supply of lubricants.

The product is intended solely for installation in another machine.

Use is only permitted within the scope of commercial or economic activity by professional users, in compliance with the specifications, technical data, and limits specified in this manual.

1.5 Persons authorized to use the product

Operator

A person who is qualified by training, knowledge and experience to carry out the functions and activities related to normal operation. This includes avoiding possible hazards that may arise during operation.

Specialist in electrics

Person with appropriate professional education, knowledge and experience to detect and avoid the hazards that may arise from electricity.

Specialist in mechanics

Person with appropriate professional education, knowledge and experience to detect and avoid the hazards that may arise during transport, installation, start-up, operation, maintenance, repair and disassembly.

1.6 Foreseeable misuse

Any usage of the product other than as specified in this manual is strictly prohibited. Particularly prohibited are:

- Use of non-specified consumables, contaminated lubricants, or lubricants with air inclusions.
- Use of C3 versions in areas with aggressive, corrosive substances (e.g., high salt load).
- Use of plastic parts in areas with high exposure to ozone, UV light, or ionizing radiation.
- Use to supply, convey, or store hazardous substances and mixtures as defined in the CLP Regulation (EC 1272/2008) or GHS with acute oral, dermal, or inhalation toxicity or substances and mixtures that are marked with hazard pictograms GHS01-GHS06 and GHS08.
- Use to supply, convey, or store Group 1 fluids classified as hazards as defined in the Pressure Equipment Directive (2014/68/EU) Article 13 (1) a).
- Use to supply, convey, or store gases, liquefied gases, dissolved gases, vapors, or fluids whose vapor pressure exceeds normal atmospheric pressure (1013 mbar) by more than 0.5 bar at their maximum permissible operating temperature.
- Use in an explosion protection zone.
- Use without proper securing against excessively high pressures, in the case of pressurized products.
- Use outside of the technical data and limits specified in this manual.

1.7 Referenced documents

In addition to this manual, the following documents must be observed by the respective target group:

- Company instructions and approval rules

If applicable:

- Safety data sheet of the lubricant used
- Project planning documents
- Supplementary information regarding special designs of the pump. This you will find in the special system documentation.
- Instructions for other components for setting up the centralized lubrication system.

1.8 Prohibition of certain activities

- Replacement of or modifications to the pistons of the pump elements
- Repairs or modifications to the drive

1.9 Painting plastic components and seals

The painting of any plastic components and seals of the products described is prohibited. Completely mask or remove plastic components before painting the main machine.

1.10 Safety markings on the product

Table 2	
	Risk of dangerous electrical voltage (on the motor terminal box)
	Risk of pinch point, crushing, or shearing when the reservoir cover is open (only for reservoirs with filling from above)
	Risk of injury from spring tension (only in pumps with a follower plate)
	Risk of injury from spring tension (only in pumps with a follower plate)
	Direction of rotation of the pump (stirring paddle)

Possible safety markings on the product

NOTE

In accordance with the results of the workstation risk assessment, additional labels (e.g., warnings, safety alerts, prohibition signs, or labels in accordance with CLP/GHS) are to be attached by the operator if necessary.

1.11 Note on the type plate


The type plate provides important data such as the type designation order number, and sometimes regulatory characteristics. To avoid loss of this data in case the type plate becomes illegible, these characteristics should be entered in the manual.

Model: _____

P.No.: _____ S. No.: _____

(CW/YY): _____

Calendar week/year of manufacture

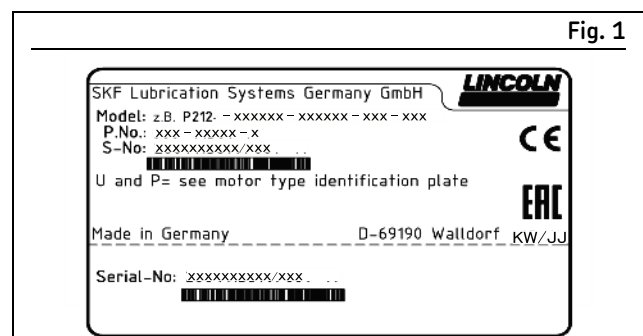

Type plate (example)

1.12 Notes on CE marking



CE marking is effected following the requirements of the applied directives requiring a CE marking:

- 2014/30/EC Electromagnetic Compatibility
- 2011/65/EU Directive on the restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS II)

1.13 Note on Low Voltage Directive

The protection objectives of the Low Voltage Directive 2014/35/EU are met in accordance with Annex I, No. 1.5.1 of the Machinery Directive 2006/42/EC.

1.14 Note on Pressure Equipment Directive

Due to its performance characteristics, the product does not reach the limit values defined in Article 4, Paragraph 1, Subparagraph (a) (ii) and is excluded from the scope of Pressure Equipment Directive 2014/68/EU in accordance with Article 1, Paragraph 2 Subparagraph (f).

1.15 Note on UKCA marking



The UKCA conformity marking confirms the product's conformity with the applicable legal provisions of Great Britain.

1.16 Note on EAC marking



The EAC conformity marking confirms the product's conformity with the applicable legal provisions of the Eurasian customs union.

1.17 Note on China RoHS mark



The China RoHS mark confirms that there is no danger to persons or the environment from the regulated substances contained within for the intended period of use (year number shown in the circle).

1.18 Emergency shutdown

This is done by a course of action to be defined by the operator.

1.19 Assembly, maintenance, fault, repair

Prior to the start of this work, all relevant persons must be notified of it. At a minimum, the following safety measures must be taken before any work is done:

- Unauthorized persons must be kept away
- Mark and secure the work area
- Cover adjacent live parts
- Dry any wet, slippery surfaces or cover them appropriately
- Cover hot or cold surfaces appropriately

Where applicable:

- Depressurize
- Isolate, lock and tag out
- Check to ensure live voltage is no longer present
- Ground and short-circuit

The product should be protected as much as possible from humidity, dust, and vibration, and should be installed so that it is easily accessible. Ensure an adequate distance from sources of heat or cold. Any visual monitoring devices present, such as pressure gauges, min./max. markings, or oil level gauges must be clearly visible. Observe the mounting position requirements.

Drill required holes only on non-critical, non-load-bearing parts of the operator's infrastructure. Use existing holes where possible. Avoid chafe points. Immobilize any moving or detached parts during the work. Adhere to the specified torques.

If guards or safety devices need to be removed, they must be reinstalled immediately following conclusion of work and then checked for proper function.

Check new parts for compliance with the intended use before using them.

Avoid mixing up or incorrectly assembling disassembled parts. Label parts. Clean any dirty parts.

1.20 First start-up, daily start-up

Ensure that:

- All safety devices are fully present and functional
- All connections are properly connected
- All parts are correctly installed
- All warning labels on the product are fully present, visible, and undamaged
- Illegible or missing warning labels are immediately replaced

1.21 Residual risks

Table 3

Residual risks		
Residual risk	Possible in lifecycle	Avoidance / Remedy
Personal injury / property damage due to falling of hoisted parts	A B C G H K	Unauthorized persons must be kept away. Nobody is allowed to be present below hoisted parts. Lift parts using suitable and tested lifting gear.
Personal injury/property damage due to tilting or falling product due to non-compliance with specified torques	B C D E F G	- Adhere to the specified torques - Mount the product only on components with a sufficient load-carrying capacity. - If no torques are specified, use those specified for the screw size for screws of strength class 8.8.
Personal injury / property damage due to electric shock	B C D E F G H	- Inspect power cables for damage prior to initial use and then at regular intervals. - Before connecting the pump unit, de-energize all relevant electrical components. Observe any discharge times. - Do not install the cable on moving parts or wearing spots. If this cannot be avoided, use anti-kink coils and/or conduits.
Personal injury / property damage due to spilled, leaked lubricant	B C D E F G H K	- Be careful when filling the reservoir and then connecting or disconnecting the lubricant lines. - Use only hydraulic screw unions and lubrication lines suitable for the specified pressure. - Do not install lubrication lines on moving parts or chafe points. If this cannot be avoided, use flexible hose lines or anti-kink coils and/or conduits. - Promptly apply suitable binding agents and then remove the spilled or leaked lubricant. - Follow operational instructions for handling the lubricants and contaminated parts.
Injury from contact with the stirring paddle when filling the pump	C D F	Preferably fill via the fill connection. Fill from the top, only when the paddle is motionless, and with the pump de-energized. Do not reach into the reservoir while filling.
Injury from hot/faulty motor	E F G	Switch off the pump. Let parts cool off; remedy the cause.
Injury due to spring tension in reservoirs with a follower plate	F G H	Wait until tension has been relieved on the spring as much as possible (i.e., the reservoir is empty) before removing a reservoir with a follower plate. Provide a suitable protective measures when loosening the reservoir, e.g., a retaining strap. Do not work with your head directly above the reservoir.

Lifecycle phases: A = Transport, B = Assembly, C = First start-up, D = Operation, E = Cleaning, F = Maintenance, G = Malfunction, repair, H = Shutdown, K = Disposal

2. Lubricants

2.1 General information

Lubricants are selected specifically for the relevant application. The manufacturer or operator of the machine should ideally make the selection in consultation with the supplier of the lubricant. If you have no or little experience in selecting lubricants for lubrication systems, please contact us. We would be happy to assist you in selecting suitable lubricants and components to build a lubrication system optimized for your particular application. Consider the following points when selecting/using lubricants. This will spare you potential downtime and damage to the machine or lubrication system.

2.2 Material compatibility

The lubricants must generally be compatible with the following materials:

- Plastics: ABS, CR, FPM, NBR, NR, PA, PET, PMMA, POM, PP, PS, PTFE, PU, PUR
- Metals: steel, gray cast iron, brass, copper, aluminum

2.3 Temperature properties

The lubricant used must be suitable for the specific ambient temperature of the product. The viscosity approved for proper functioning must neither be exceeded at low temperatures nor fall too low at high temperatures. For the approved viscosity, see the "Technical data" chapter.

2.4 Aging of lubricants

Based on past experience with the lubricant used, checks should be conducted at regular intervals defined by the operator, to determine whether the lubricant needs to be replaced due to aging processes (oil separation). In case of doubt regarding the continued suitability of the lubricant, it must be replaced before the system is started up again. If you do not yet have any experience with the lubricant used, we recommend conducting a check after just one week.

2.5 Avoidance of faults and hazards

To avoid faults and hazards, please observe the following:

- When handling lubricants, observe the relevant safety data sheet (SDS) and any hazard labeling on the packaging.
- Due to the large number of additives, some lubricants that meet the pumpability requirements specified in the manual are not suitable for use in centralized lubrication systems.
- Whenever possible, always use SKF lubrication greases. They are ideal for use in lubrication systems.
- Do not mix lubricants. This can have unpredictable effects on the properties and usability of the lubricant.
- Use lubricants containing solid lubricants only after technical consultation with SKF.

- The lubricant's ignition temperature has to be at least 50 kelvin above the maximum surface temperature of the components.

2.6 Solid lubricants

Solid lubricants may only be used after prior consultation with SKF. When solid lubricants are used in lubrication systems, the following rules generally apply:

Graphite:

- Maximum graphite content 8%
- Maximum grain size 25 µm (preferably in lamellar form)

MoS₂:

- Maximum MoS₂ content 5%
- Maximum grain size 15 µm

Copper:

- Lubricants containing copper are known to lead to coatings forming on pistons, bore holes, and mating surfaces. This can result in blockages in the centralized lubrication system.

Calcium carbonate:

- Lubricants containing calcium carbonate are known to lead to very heavy wear on pistons, bore holes, and mating surfaces.

Calcium hydroxide:


- Lubricants containing calcium hydroxide are known to harden considerably over time, which can lead to failure of the centralized lubrication system.

PTFE, zinc, and aluminum:

- For these solid lubricants, it is not yet possible to define any limit values for use in lubrication systems on the basis of existing knowledge and practical experience.

3. Overview, functional description

3.1 Overview

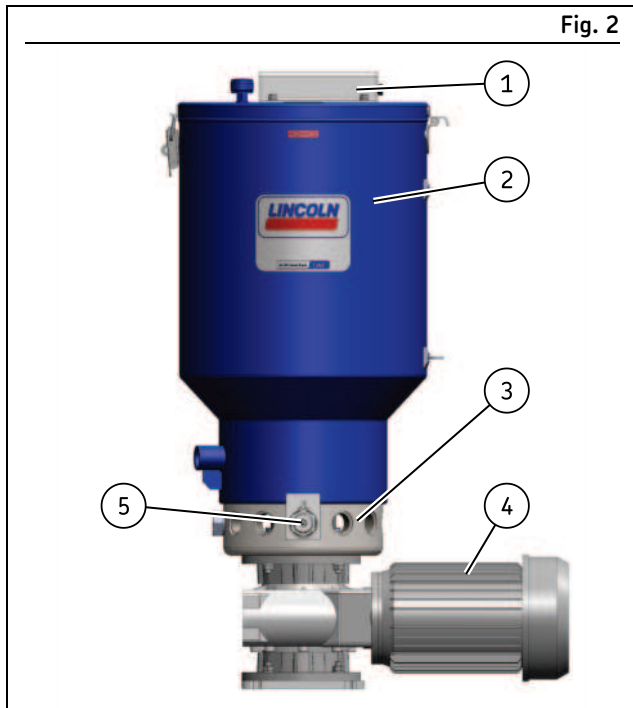


Main components

Legend to Figure 2:

- 1 Ultrasonic sensor
- 2 Reservoir with stirring paddle
- 3 Pump housing
- 4 Motor with gearbox
- 5 Pump elements (1-12)

3.2 Mode of operation

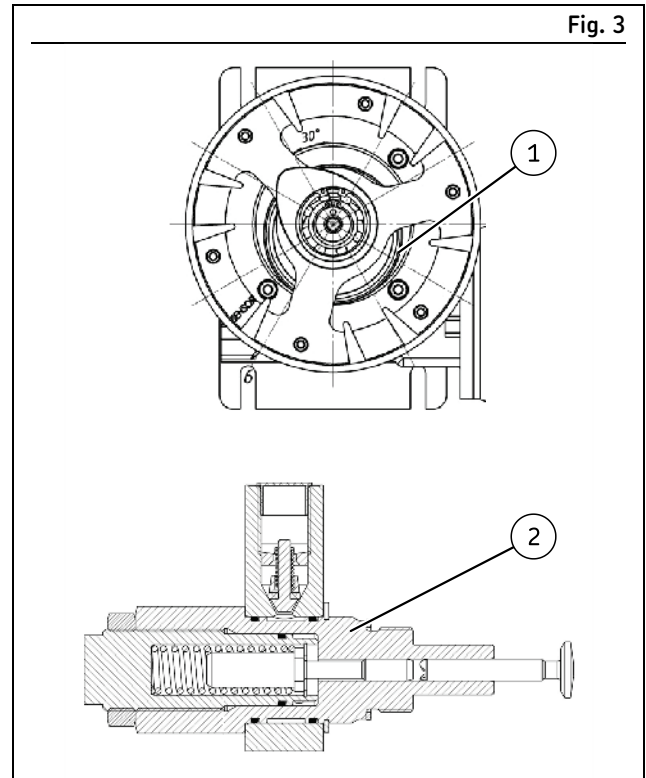

Mode of operation

Legend to Figure 3:

- 1 Eccentric shaft
- 2 Pump elements

The gearbox (fig. 3/5) reduces the speed of the motor (fig. 3/4) to the speed required for the eccentric shaft (fig. 3/1).

The eccentric shaft (Fig. 3/1) drives the pump elements (Fig. 3/6 and Fig. 3/2) and the stirring paddle.

The stirring paddle in the reservoir homogenizes the lubricant, purges it of air, and pushes it toward the suction bores of the pump elements.

The pump elements (Fig. 3/6 and Fig. 3/2) pump the lubricant by the motion of their pistons.

This involves a suction phase (when the lubricant is suctioned out of the reservoir) and then a pressure phase (when the lubricant is pumped into the lubrication line).

The ultrasonic sensor (Fig. 3/1) on the reservoir cover detects the level of lubricant remaining in the reservoir (and issues a full or empty signal, when applicable). The customer's control system switches a filling pump on and off accordingly.

4. Technical data

4.1 Technical data

Table 4

Table 4			
Technical data			
Designation	Value		
Operating temperature ¹⁾	Min. -20 °C Max. +70 °C		
Operating pressure ²⁾	Max. 350 bar		
Mounting position	Upright, with reservoir at top		
Reservoir size	30 L		
Minimum mounting dimensions ³⁾			
– Reservoir design XYN	Minimum space required	540 mm (width) / 880 mm (height) / 400 mm (depth)	
– Reservoir design XYBU	Minimum space required	540 mm (width) / 930 mm (height) / 400 mm (depth)	
– Reservoir design XBF	Minimum space required	540 mm (width) / 1220 mm (height) / 400 mm (depth)	
Sound pressure level	< 70 dB(A)		
Weight	Pump, empty:	Approx. 36 kg	
	1 pump element:	+ 0.9 kg	
Electrical connection ⁴⁾	Voltage tolerance:	± 5 %	
	Frequency tolerance:	± 2 %	
IP protection class	Motor:	For the IP rating, see the type plate of the motor, or the “Technical data” section for the motor.	
	Ultrasonic sensor:	IP 65	
Tightening torques	Pump element on housing:	35 Nm	
	Locknut on pump element spindle:	max. 15 Nm	
	Plug screw on housing:	35 +2 Nm	
Connections/outlets	1x fill connection 3/8” 12x outlet port 3/8”		
Filling options	Via fill connection Via reservoir cover		
Direction of pump rotation	The direction of rotation is always clockwise (CW). Observe the arrow on the reservoir. If the direction of rotation is different, switch off the pump immediately and check the electrical connection.		
Permissible speeds	Lubricants	Min. speed	Max. speed
	Grease	2.5 rpm	22 rpm
	Oil	2.5 rpm	35 rpm

¹⁾ Use a lubricant that is suitable for the operating temperature actually present (e.g., a lubricant for the low temperature range).

²⁾ All system parts must be designed for the maximum operating pressure. Every pump element must be safeguarded with a suitable pressure limiting valve to prevent higher pressures. If multiple pump elements are grouped together, they must be safeguarded together, with a suitable pressure limiting valve to prevent higher pressures.

³⁾ In order to have sufficient space for maintenance work or for the attachment of additional components for the construction of a centralized lubrication system on the pump, sufficient clearance should be provided in every direction in addition to the specified dimensions. In particular, the additional clearance required for complete opening of the reservoir cover and for the air inlet of the drive motor (+ 40 mm) must be observed.

⁴⁾ This is performed according to the applicable installation requirements for electrical systems. Waveform and network symmetry must be maintained.

4.2 Delivery rate

NOTICE

Damage / malfunction

Possible damage to the machine due to influencing variables

Influencing variables such as:


ambient temperature, back pressure, type of pumped fluid, NLGI Grade of the pumped fluid, and type of connection of the pump's multi-range motor, can cause the delivery rate to deviate from the range specified on the delivery rate charts. This must be considered in the design of the lubrication points. If you have questions, please contact our Customer Service.

The delivery rate can be adjusted with infinite variability within the following ranges:

KR 7 30 % to 100 %

KR 12 40 % to 100 %

The specifications on the delivery rate charts are valid when the pumped fluid is Fuchs Renocal FN 745 NLGI 2, at + 20 °C and back pressure of 0 to 350 bar.

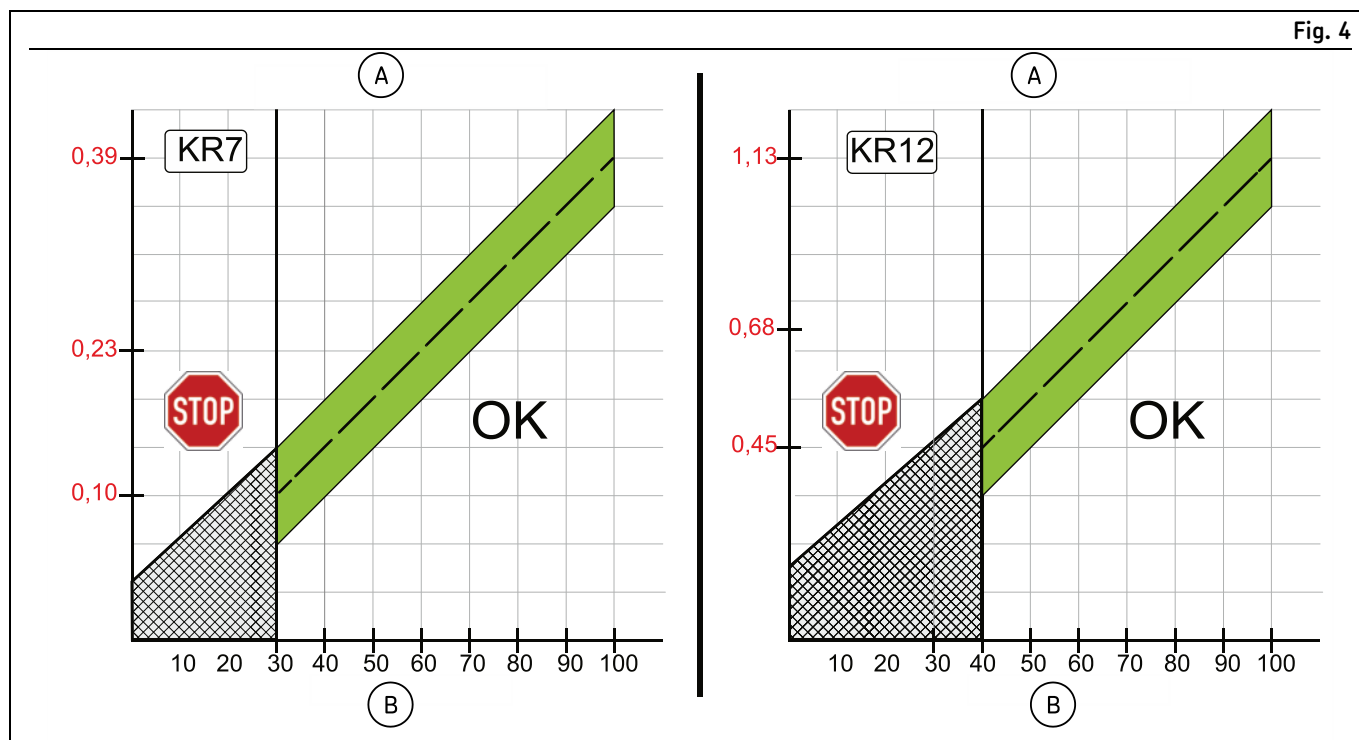

Delivery rate chart for pump elements KR7 and KR12

Legend to Figure 4:

A Delivery volume in ccm/stroke

B % supply

4.3 Motor

Table 5


Pump type	P212
Item number	245-13996-1
FEN motor code no.	U00-00
Parameter	Value
Voltage	220-240 / 380-415 V 243-277 / 420-480 V
Frequency	50 Hz 60 Hz
Rated capacity	0.55 kW 0.65 kW
Rated speed	1410/21 rpm 1692/25 rpm
Rated current	1.6 A (400 V)
Starting current	3.9 x rated current
Rated current torque	3.8 Nm
Efficiency	74 % η
Power factor	0,78 $\cos \phi$
Operating mode	S1
Type	IM B14
Frame size	80
Enclosure rating	IP 55
Insulation class	F
Flange	120 mm
Shaft	19x40 mm
Weight	8.5 kg (gearbox: 6 kg)
Terminal box	Bottom (KKD) ¹⁾
Screwed gland	On the fan side ¹⁾
Type plate	Right (position A) ¹⁾
Special design, mechanical	With gearbox HYSGP063FB067BG80B14 i=1:67 and a second gearbox flange Terminal box position D

¹⁾ Arrangement when looking at the fan box

4.4 Ultrasonic sensor

4.4.1 Full signal/low-level signal/minimum clearance

Fig. 5

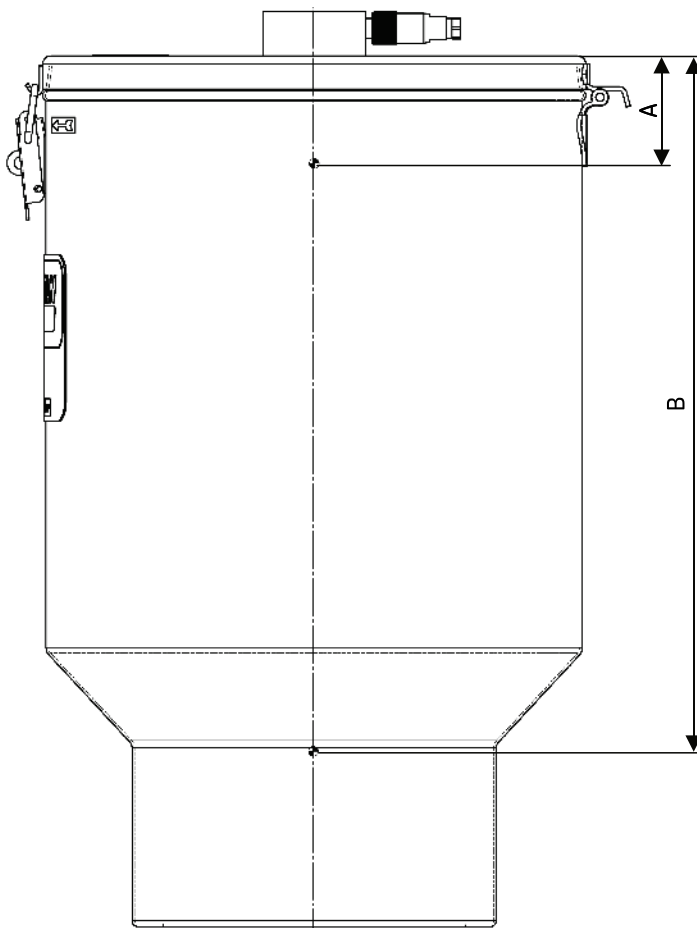

Full signal/low-level signal/minimum clearance

Table 6

Technical data (full signal/low-level signal/minimum clearance)

Reservoir	Switching points
30XYBU	A: Full signal approx. 65 mm B: Low-level signal approx. 420 mm

NOTE

The minimum clearance between the lubricant and the ultrasonic sensor is 60 mm. If this distance is not maintained, undefined switching states of the ultrasonic sensor could result in faulty measurement results.

4.4.2 Ultrasonic sensor 664-85313-9

Table 7

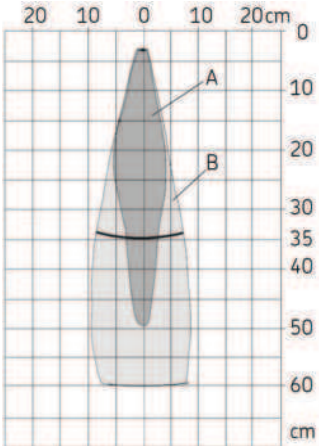
Technical data	
Parameter	Value
Blind zone	0-65 mm
Sensing range	600 mm
Ultrasonic frequency	Approx. 400 kHz
Sonic frequency	3.7 Hz
Resolution	0.18 mm
Accuracy	± 1 %
Reproducibility	± 15 %
Sensing range in centimeters	 The dark gray areas (A) indicate the range in which the standard reflector (a tube) is reliably detected. This is the typical operating range of the sensors. The light gray areas (B) represent the range in which a large reflector (such as a plate) is still detected provided that it is optimally aligned to the sensor. No evaluation is possible outside the light gray area.
Operating voltage U_B	9-30 VDC (reverse polarity resistant)
Residual ripple	± 10 %
No-load power consumption	≤ 60 mA
Connection type	M12 connector, 5-pin
Response delay	272 ms
Readiness delay	< 300 ms
Enclosure rating per EN 60529	IP65
Operating temperature range	- 40 °C to + 70 °C
Switching points	Full signal D1; low-level signal D2 according to the reservoir size; pre-empty signal D3 programmable upon customer request, preset to 10 mm above the low-level signal (use is optional)
Conformity with standards	DIN EN 60947-5-2
Display elements	LED green/LED orange Switching output set/not set
Housing material	PBT, polyester, ultrasonic transducer: PUR, epoxy resin with glass contents
Switching output	3x pnp; UB-2V; I _{max} = 3 x 200 mA; NO contact, short-circuit proof

Table 8

Electrical connection

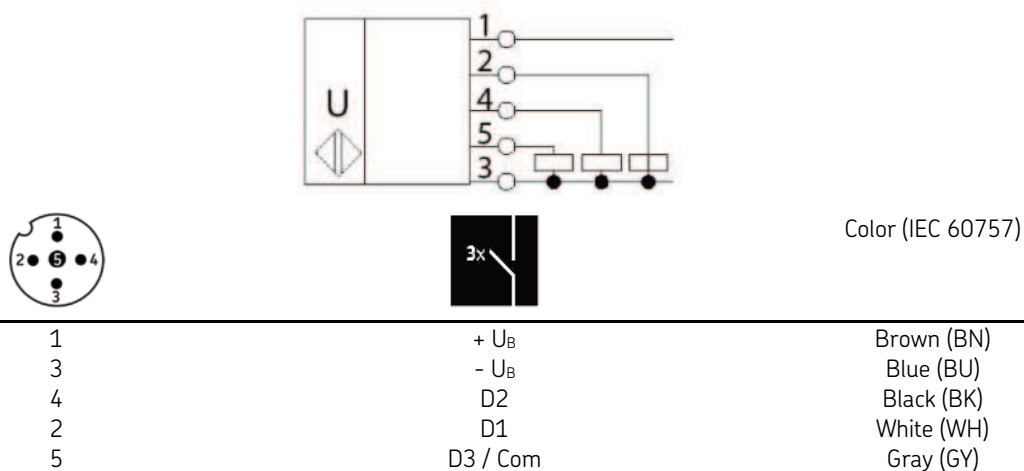


Table 9


Display of the circuit states

Parameter	Switching points			D1 (up to 10/21)	Display of the LEDs			--
	D1	D2	D3		D1 (from 10/21)	D2 (up to 10/21)	D2 (from 10/21)	
Full signal (high level)	A	A	B	Orange	Green	Orange	Green	C
Between full signal and pre-B empty signal		A	B	Green	Orange	Orange	Green	C
Pre-empty signal	B	A	A	Green	Orange	Orange	Green	D
Low-level signal	B	B	B	Green	Orange	Green	Orange	C

A = switched, B = not switched, C = steady, D = flashing

Dimensions:

Fig. 6

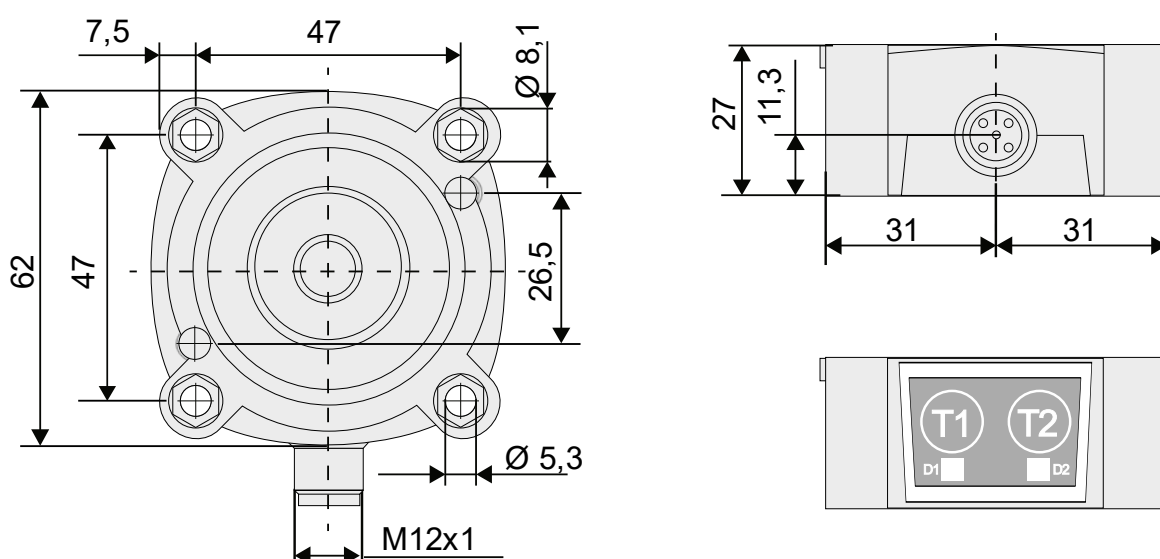

Dimensions

4.5 Type identification code for pump P212

	P212	-	M G 067	-	30 XYBU	-	3 KR12	-	380 - 480
Pump type:									
P212	Pump P212 for grease or oil								
Drive:									
MG067	Large flange / transmission ratio 67:1								
Reservoir assembly:									
30	30-liter sheet steel reservoir								
Reservoir versions:									
XYN	Reservoir for grease and oil, without level control								
XYBU	Reservoir for grease and oil, with full/low-level signal (ultrasonic sensor)								
XBF	Reservoir for grease, with full/low-level signal (position switch) and follower plate								
Number of pump elements:									
Number of elements									
1 to 12									
Adjustable pump element:									
KR 7	Piston diameter 7 mm								
KR 12	Piston diameter 12 mm								
Motor:									
380-480	Multi-range motor								
	50/60 Hz, 0.55 kw								
	1500 rpm, flange D 120								
	Gearbox 67:1								

5. Delivery, returns, storage

5.1 Delivery

After receipt of the shipment, it must be inspected for any shipping damage and for completeness according to the shipping documents. Immediately inform the transport carrier of any shipping damage. The packaging material must be preserved until any discrepancies are resolved.

5.2 Return shipment

Before return shipment, all contaminated parts must be cleaned. If this is not possible or practical, e.g. if it would impede fault detection in the case of complaints, the medium used must always be specified. In the case of products contaminated with hazardous substances as defined by GHS or CLP regulations, the safety data sheet (SDS) must be sent with the product and the packaging must be labelled in accordance with GHS/CLP. There are no restrictions for land, air, or sea transport. The choice of packaging should be based on the specific product and the stresses to be expected during transport (e.g., necessary anti-corrosion measures in the case of shipment by sea). In the case of wooden packaging, the applicable import regulations and the IPPC standards must be observed. Required certificates must be included in the shipping documents. The following information, as a minimum, must be marked on the packaging of return shipments.



Marking of return shipments

5.3 Storage

The following conditions apply to storage:

- Dry, low-dust, vibration-free, in closed rooms
- No corrosive, aggressive substances at the storage location (e.g., UV rays, ozone)
- Protected against animals (insects, rodents)
- If possible, keep in the original product packaging
- Protected from nearby sources of heat or cold
- In the case of large temperature fluctuations or high humidity, take appropriate measures (e.g., heating) to prevent the condensation of water
- Before usage, check products for damage that may have occurred during storage. This applies in particular to parts made of plastic (due to embrittlement).

5.4 Storage temperature range

For parts not filled with lubricant, the permitted storage temperature is the same as the permitted ambient temperature range (see "Technical data").

5.5 Storage conditions for products filled with lubricant

For products filled with lubricant, the permitted storage temperature range is:

minimum	+ 5 °C	[+41 °F]
maximum	+ 35 °C	[+95 °F]

If the storage temperature range is not maintained, the following steps for replacing the lubricant may not lead to the desired result under certain circumstances.

5.5.1 Storage period up to 6 months

Filled products can be used without implementing additional measures.

5.5.2 Storage period between 6 and 18 months

Pump:

- Connect the pump to a power source
- Switch on the pump and run it until lubricant comes out of every outlet without air bubbles
- Disconnect the pump from the power source
- Remove and dispose of the lubricant that came out

Lines:

- Remove pre-installed lines
- Ensure that both ends of the line are open
- Fill the lines completely with fresh lubricant

Metering devices:

NOTE

Due to the large number of different metering devices, no universally valid statement can be made regarding the removal of the old lubricant and correct bleeding after filling with new lubricant. The instructions can be found in the technical documentation of the specific metering device used.

5.5.3 Storage period more than 18 months

To prevent faults, the manufacturer should be consulted before start-up. The basic procedure for removal of the old lubrication filling corresponds to that for storage periods between 6 and 18 months.

5.6 Declaration of decontamination

If the product came in contact with harmful substances, make sure to thoroughly clean the product before returning it to us. Due to statutory provisions and for the safety of our employees and operation facilities we further need a fully completed and signed "Declaration of decontamination".

6. Assembly

Observe the safety instructions and the technical data in this manual. Additionally, during assembly pay attention to the following:

- Only qualified and authorized technical personnel may install the products described in this manual.
- Adhere to safety distances and legal prescriptions on assembly and prevention of accidents.
- Possibly existing visual monitoring devices, e.g. pressure gauges, MIN/MAX markings, oil inspection glasses must be clearly visible.
- Protect the product against humidity, dust and vibrations.
- Install the product in an easily accessible position. This facilitates other installations, control and maintenance work.

6.1 Electrical connection

NOTE

The pump must be connected electrically in accordance with the terminal diagram provided by the manufacturer of the flange-mounted motor.

⚠ WARNING



Electric shock

Work on electrical components may be performed only by qualified electricians.

At a minimum, the following safety measures must be taken before any work on electrical components is done:



- Isolate, lock and tag out
- Check to ensure the absence of voltage
- Ground and short-circuit the product
- Cover any live parts in the surrounding area

Observe the following instructions for a safe connection:

- The electrical connection must be implemented in accordance with the specifications of the standards of the DIN VDE 0100 series or of the standards of the IEC 60364 series, respectively

Connect the electrical lines in such a way that no mechanical forces are transferred to the product

- The pump must be secured with a suitable external fuse (see terminal diagram)

The electrical connection is established in accordance with the type of connection of the specific pump.

1. Assemble the required cables in accordance with the respective connection diagram or use preassembled cables for the connection.
2. Connect plugs with their respective bushes and secure them against becoming loose using the type of securing method specified for the quick disconnect couplings. Only this way is a safe connection and compliance with the enclosure rating secured.


NOTE

Connect the cables in such a way that no tensile forces can be transferred to the product.

6.2 Important note regarding installation of the pump elements

The individual pump elements should be installed in the order shown on the figure (Fig. 8).

Fig. 8

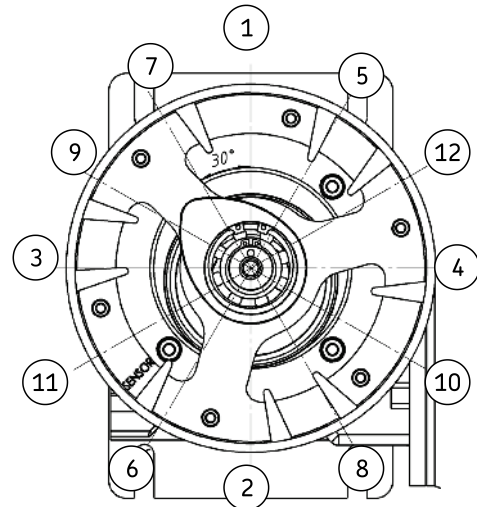


Mounting position of the pump elements

NOTE

The pump elements are set at the factory to minimum delivery, to improve the suction characteristics (by minimizing the space for air in the pump element). After first start-up, the pump elements must be set to the required delivery rate.

6.3 Installing the pump elements

Fig. 9

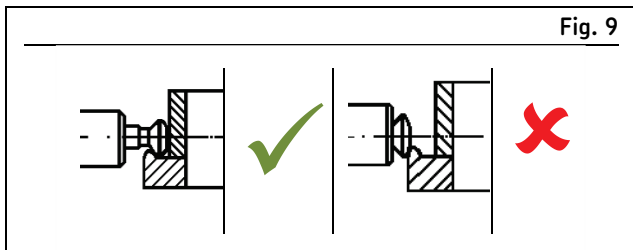

Correct position of the pump elements

NOTICE


Possible damage to the pump

Incorrectly installed pump elements can result in damage to the pump

- Make sure that every pump element is sitting correctly in the groove on the driver ring (Fig. 9).

1. Remove the plug screw.
2. With the reservoir full, use a suitable tool (such as a screwdriver) to open a channel to the driver ring.
3. Pull the piston about 30 mm out of the pump element.
4. Insert pump elements at an angle and hook them into the driver ring straight.
5. Use a torque wrench to tighten the pump elements, to a **torque of 35 Nm**.
6. With the reservoir unfilled, also check the position of the pump element in the groove of the driver ring from above.
7. Switch on the pump.
8. Wait until grease comes out of the outlet port on the pump elements.
9. Switch off the pump.
10. Attach delivery lines filled with grease and install pressure limiting valves.

Fig. 10

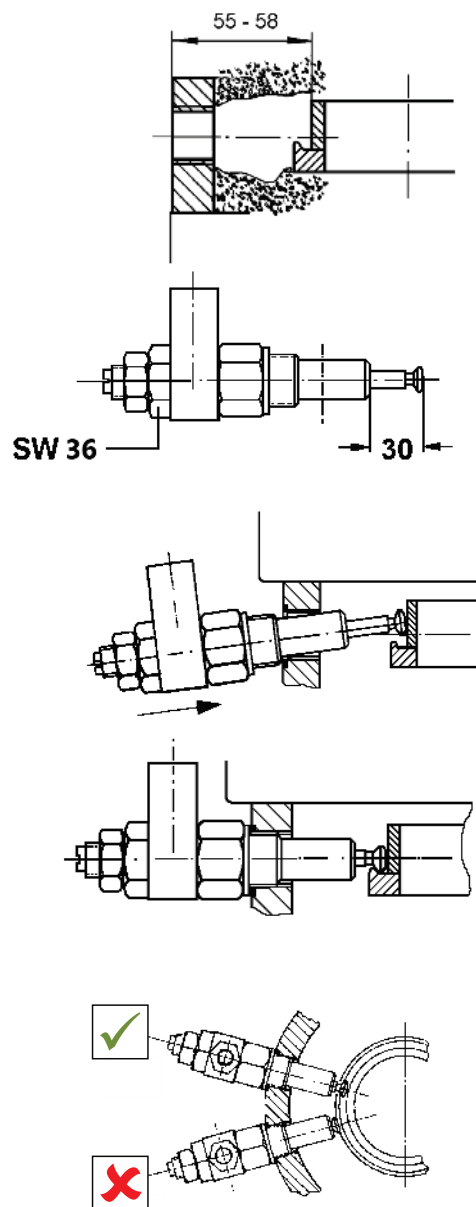


Installing the pump elements

6.4 Setting the pump elements

NOTE

The delivery rate of the pump elements can also be set during operation

Fig. 11

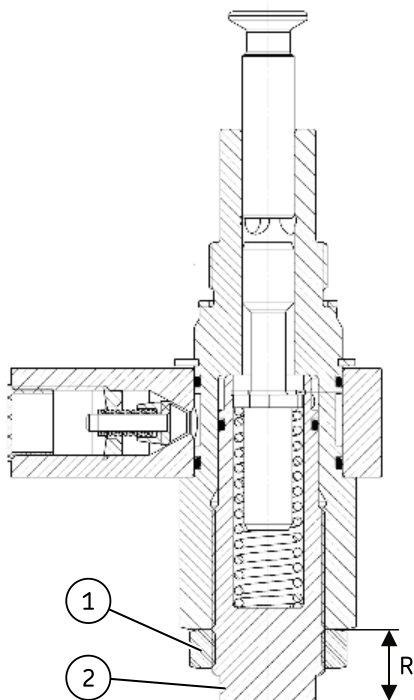

Setting the delivery rate

Legend to Figure 11:

1 Locknut

2 Spindle

R Delivery rate set as a percentage

1.Undo the locknut (Fig. 11/1).

2.To set the delivery rate, turn the spindle (Fig. 11/2) in the relevant direction:

-  = lower delivery rate
-  = higher delivery rate.

NOTE

Dimension R (Fig. 11/R) refers to the delivery rate set as a percentage (see the delivery rate chart for values). The supply is reduced or increased by approx. 10 % per millimeter.

Table 10

Delivery rate

R	%	KR7	KR12
R = 25 mm	100 %	✓	✓
R = 24 mm	90 %	✓	✓
R = 23 mm	80 %	✓	✓
R = 22 mm	70 %	✓	✓
R = 21 mm	60 %	✓	✓
R = 20 mm	50 %	✓	✓
R = 19 mm	40 %	✓	✓
R = 18 mm	30 %	✓	✗

3.After setting the delivery rate, tighten the locknut (Fig. 11/1) again, to a torque of max. 15 Nm.

6.5 Filling the reservoir

6.5.1 Filling via the reservoir cover

⚠ WARNING



Hand injury from stirring paddle
Touching the stirring paddle when it is in motion can result in serious injury

- Refill lubricant via the cover only when the pump is at a standstill.
- Never reach into the reservoir when the pump is running.

NOTICE

Possible faults in the centralized lubrication system
Incorrect filling of the reservoir can result in faults in the centralized lubrication system

Make sure that:

- No contaminants enter the reservoir
- The ultrasonic sensor is not contaminated
- The clearance between the lubricant and the ultrasonic sensor is at least 60 mm

Fig. 12



Reservoir cover

Legend to Figure 12:

1 Reservoir cover

1. Switch off the pump and secure it against being switched back on (lock it out).
2. Open the reservoir cover (Fig. 12/1).
3. Fill with lubricant.
4. Close the reservoir cover (Fig. 12/1).

5. Switch on the pump.

6.5.2 Filling via the fill connection

Automatic filling:

The filling pump is controlled by the full and low-level signals of the pump, combined with a higher-level control.

Manual filling:

Get a second person to observe the filling process

1. Switch on the filling pump.
2. Fill the reservoir.
3. Switch off the filling pump.

6.6 Accidental filling with wrong lubricant

Proceed as follows if an incorrect lubricant is accidentally filled:

1. Switch off the pump and secure it against being switched back on (lock it out).
2. Remove the lubricant.
3. Clean the reservoir/pump housing and also, if necessary, the piping system.
4. Fill with lubricant. Make sure the specifications are correct.
5. Switch on the pump.
6. Inform your supervisor so the error can be avoided by organizational changes in future.

7. First start-up

NOTICE

Damage

Possible damage to the machine

Fill the delivery lines with lubricant, and lubricate the lubrication points manually. Otherwise, it is possible that bearings will be damaged by a lack of lubrication. Ensure that all parameters, variables, and consumables are correctly configured and available. Any identified deviations must be resolved immediately.

To ensure safety and functionality, the person specified by the operator is required to inspect certain areas of the centralized lubrication system prior to initial commissioning. Any detected deficiencies must be reported immediately to the supervisor. The correction of deficiencies must be done exclusively by a specialist.

7.1 Inspections before first start-up

Table 11

Checklist: Inspections before first start-up

Inspections to be performed	YES	NO
Electrical connection established correctly.	☐	☐
Mechanical connection established correctly.	☐	☐
The performance characteristics for the aforementioned connections match the specifications in the "Technical data".	☐	☐
All components, e.g. lubrication lines, are pre-filled with the correct lubricant and correctly installed.	☐	☐
No apparent damage, contamination, or corrosion.	☐	☐
Product is protected by a suitable pressure limiting valve.	☐	☐
Any dismantled protective and monitoring equipment is fully reinstalled and functional.	☐	☐
All warning labels on the product are present and in proper condition.	☐	☐
The lubricant used matches the permissible specifications of the pump and the intended use.	☐	☐

7.2 Inspections during first start-up

Table 12

Checklist: Inspections during first start-up

Inspections to be performed	YES	NO
No unusual noises, vibrations, moisture accumulation, or odors present.	☐	☐
No undesired discharge of lubricant at connections (leakage).	☐	☐
Lubricant is fed without bubbles.	☐	☐
The bearings and friction points requiring lubrication receive the planned lubricant volume.	☐	☐

7.3 Activating the pump

Activate the pump as follows:

- When installed in a machine
 - By switching on the machine contact.
- When installed in a vehicle
 - By switching on the master controller/by starting vehicle movement.

8. Operation

8.1 Daily start-up

The activities to be performed in normal operation are listed below

8.1.1 Inspections

For the activities listed in section 7. First start-up, the owner-operator must define suitable inspection periods according to the specific situation in which the pump is operated

8.1.2 Filling the reservoir during operation

The reservoir is filled as described in section 6.5 Filling the reservoir

8.1.3 Cleaning

See section 10. Cleaning

9. Maintenance

Careful and regular maintenance is required in order to detect and remedy possible faults in time. The operator must always determine the specific intervals according to the operating conditions, review them regularly, and adjust them where necessary. If necessary, copy the table for regular maintenance activities.

Table 13

Checklist: Maintenance activities

Activity to be performed	YES	NO
Mechanical and electrical system connections established correctly	☐	☐
The performance characteristics for the aforementioned connections match the specifications in the "Technical data"	☐	☐
All components such as lubrication lines and metering devices are correctly installed	☐	☐
Product is protected by a suitable pressure relief valve	☐	☐
No apparent damage, contamination, or corrosion	☐	☐
Any dismantled protective and monitoring equipment is fully reinstalled and functional	☐	☐
All warning labels on the product are present and in proper condition	☐	☐
No unusual noises, vibrations, moisture accumulation, or odors present	☐	☐
No undesired discharge of lubricant (leakages) at connections	☐	☐
Lubricant is fed without bubbles	☐	☐
The bearings and friction points requiring lubrication receive the planned lubricant volume	☐	☐

10. Cleaning

10.1 Basics

Cleaning should be carried out in accordance with the operator's own company rules, and cleaning agents and devices and the personal protective equipment to be used should likewise be selected in accordance with those rules. Only cleaning agents compatible with the materials may be used for cleaning. Completely remove any cleaning agent residue left on the product and rinse with clear water. Unauthorized persons must be kept away. Use signage to indicate wet areas.

10.2 Interior cleaning

The interior normally does not need to be cleaned. The interior of the product must be cleaned if incorrect or contaminated lubricant accidentally enters the product. Please contact our Service department.

10.3 Exterior cleaning

Do not allow any cleaning fluid to enter the interior of the product during cleaning.

WARNING



Risk of fatal electric shock



Cleaning work may only be performed on products that have been de-energized first. When cleaning electrical components, be mindful of the IP enclosure rating.

WARNING



Serious injury from contact with or inhalation of hazardous substances



Wear personal protective equipment. Observe the safety data sheet (SDS) of the hazardous substance. Avoid contaminating other objects or the environment during cleaning.



If products have ultrasonic sensors, the active sensor surface must be cleaned with a cloth when it becomes contaminated.

11. Faults, causes, and remedies

⚠ WARNING



Electric shock

Disconnect the product from the power supply before any work on electrical components

- Assembly, maintenance, and repair work may only be performed by qualified technical personnel
- De-energize the product prior to beginning work
- Local electrical operating conditions and regulations (e.g., DIN, VDE) must be observed

Table 14

Fault table

Fault	Possible cause	Remedy
Pump motor does not run (no pumping noise)	• Fault in the main machine/external control. • Motor circuit breaker tripped	• Check the electrical power lines/external control/motor circuit breaker.
Motor runs but pump does not deliver medium	• Reservoir empty • Air in lubricant • Suction bore of the pump element clogged • Check valve is faulty or contaminated • Pump element is worn (little pressure build-up) • Faulty pressure limiting valve / fault at the lubrication point (grease coming out of the pressure limiting valve) • Blockage in the downstream lubrication system (grease coming out of the overpressure valve)	• Visually inspect and top up if needed • Bleed the air • Remove and clean the pump element • Replace the check valve • Replace pump element • Determine the cause • Replace pressure limiting valve • Determine and resolve the cause.

12. Shutdown, disposal

12.1 Temporary shutdown

Temporary shutdowns should be done by a course of action to be defined by the operator.

12.2 Permanent shutdown, disassembly

Permanent shutdown and disassembly of the product must be planned properly by the operator and conducted in compliance with all applicable laws and regulations.

12.3 Disposal


The waste producer/operator must dispose of the various types of waste in accordance with the applicable laws and regulations of the country in question.

13. Spare parts

13.1 Ultrasonic sensor

Table 15		
Designation	Pcs.	Item number
Ultrasonic sensor for 30 L reservoir	1	664-85313-9

13.2 Pump element KR7

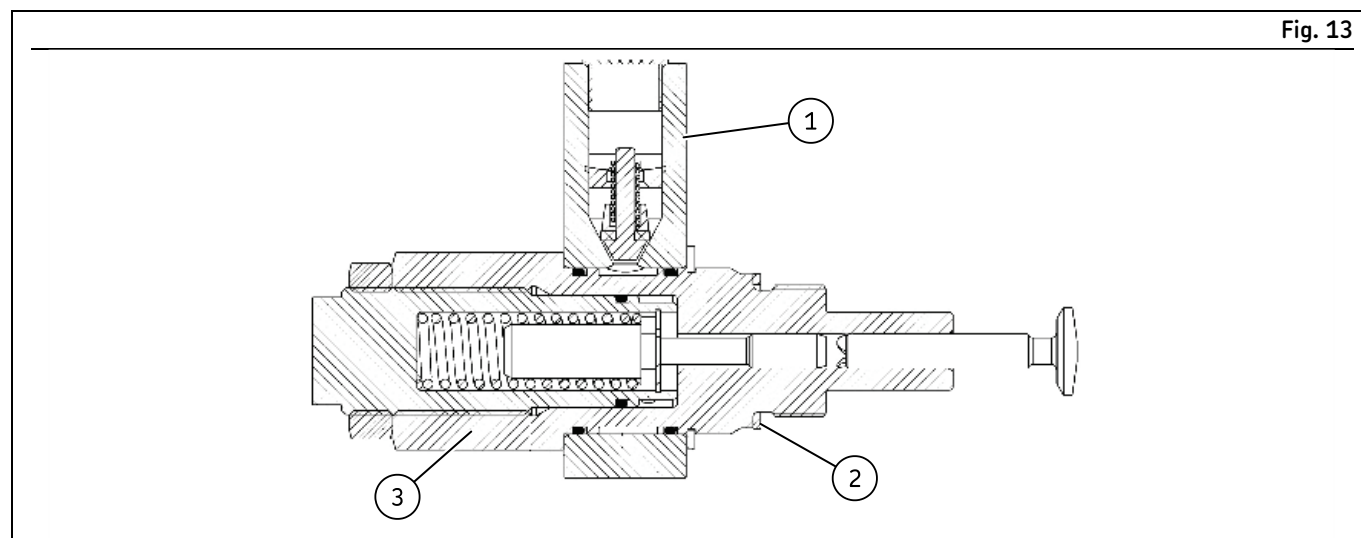


Pump element KR7

Table 16		
No.	Designation	Pcs. Item number
	Pump element KR7, complete	1 660-77835-1
	Comprising:	
1	Outlet port with check valve, complete	
2	Sealing ring	
3	Pump element KR7	

13.3 Pump element KR12

Fig. 14

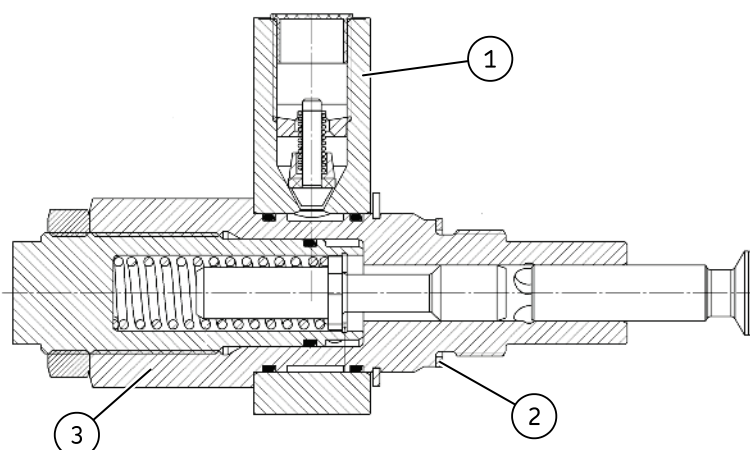

Pump element KR12

Table 17

No.	Designation	Pcs.	Item number
	Pump element KR12, complete	1	660-77619-1
	Comprising:		
1	Outlet port with check valve, complete		
2	Sealing ring		
3	Pump element KR12		

13.4 Motor

Table 18

Designation	Pcs.	Item number
Multi-range motor 0.55 / 0.65 kW, 380-415 / 420-480 V with gearbox i=67:1	1	245-13996-1

13.5 Retainer plate, reservoir, stirring paddle

Table 19

Designation	Pcs.	Item number
Retainer plate	1	460-73065-1
Reservoir 30XYBU incl. stirring paddle	1	660-28801-1
Stirring paddle	1	560-32129-1

13.6 Plug screw

Table 20

Designation	Pcs.	Item number
Plug screw	1	303-17431-1
Sealing ring	1	306-17814-1

14. Appendix

14.1 Cable colors in accordance with IEC 60757

Table 21

Cable colors in accordance with IEC 60757

Abbreviation	Color	Abbreviation	Color	Abbreviation	Color	Abbreviation	Color
BK	Black	GN	Green	WH	White	PK	Pink
BN	Brown	YE	Yellow	OG	Orange	TQ	Turquoise
BU	Blue	RD	Red	VT	Violet	GY	Gray
GNYE	Green/Yellow	RDWH	Red/White	GD	Gold	SR	Silver

Not all cable colors need to be used in the terminal diagrams.

14.2 China RoHS Table

Table 22

部件名称 (Part Name)	有毒害物质或元素 (Hazardous substances)					
	铅	汞	镉	六价铬	多溴联苯	多溴二苯醚
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr(VI))	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ethers (PBDE)
用钢和黄铜加工的零件 (Components made of machining steel and brass)	X	0	0	0	0	0
本表格依据SJ/T11364的规定编制 (This table is prepared in accordance with the provisions of SJ/T 11364.)						
0 :	表示该有毒有害物质在该部件所有均质材料中的含量均在GB/T 26572 规定的限量要求以下。 (Indicates that said hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement of GB/T 26572.)					
X :	表示该有毒有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572标准规定的限量要求。 (Indicates that said hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement of GB/T 26572.)					

[illegible]

[illegible]

skf.com/lubrication

© SKF and Lincoln are registered trademarks of the SKF Group.

TM eLube is a trademark of the SKF Group.

© SKF Group 2023

Reprint or reproduction of the contents of this information - even in part - is permitted only with SKF's prior written consent.

PUB 951-171-084-EN 29.06.2023